



Fax.....+ 47 35 98 56 10 E-mail.....dnh@dnh.no

Web-site..... www.dnh.no

# **VES-561(T)**

### ENGLAND DNH WW Ltd


Phone + 44 1908 275 000
Fax+ 44 1908 275 100
E-maildnh@dnh.co.uk


## GERMANY DNH GmbH

Phone + 49	040 6569 30-0
Fax + 49 0	40 6569 30-30
E-mail	dnh@dnh.de

#### USA DNH Speakers Inc

Phone+ 1	1 484 494 5790
Fax+ 1	1 484 494 5793
E-maildnh@dn	hspeakers.com

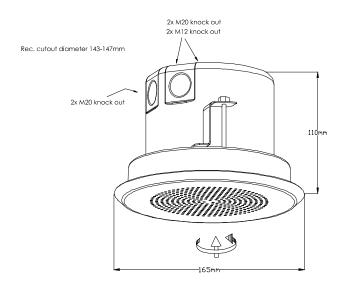

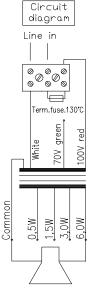

70/100 volt combined transformer Primary connections White: Green 70 V White: Red 100 V Secondary nominal tappings C: 6,0W 6,0 W 3,0 W C: 3,0W C: 1,5W 1,5 W C: 0,5W 0,5 W

BS5839 Part 8 VA compliant

dBSPL			2	SPL vs	Freq		
10				<b>~~</b>	7/~	$\sim$	 1
60					V		
70	\/	$\sqrt{}$					<b>,</b> M
10							
, N							IMS

Specifications				
Material / Color	Steel / White			
Mounting	3 screws			
Termination	Ceramic terminal			
Weight	1,1 kg			
IP-rating	32C			
Max. / min. amb. temp	90°C / -20°C			
Standard version	100 V transformer			
Rated power	6 W			
SPL 1W/1m	90 dB			
SPL rated power	97 dB			
Effective freq. range	100 – 13000 Hz			
Dispersion (-6dB) 1kHz / 4kHz	160° / 60° (baffle)			
Options	Impedances, colors, labels			

#### **Installation, Operation and Maintenance Procedures**

- Install the steel box into the cutout hole turning the screws connected to the three hooks, screw clockwise until the ring is fixed to the ceiling.
- Lead cable through cable gland, connect to terminal and select required tapping into the transformer.
- If 70V, replace red cable with the green cable in the terminal.
- Turn the grille gently clockwise within the ring until it stops.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Transformer according to British standard 5839.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.