



BA-56EExeN(T)x2

GERMANY DNH GmbH Phone......+ 44 1908 275 000

Phone... + 49 040 6569 30-0 Fax..... + 49 040 6569 30-30 E-mail.....dnh@dnh.de

DNH Speakers Inc

Phone.....+ 1 484 494 5790 Fax.....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

> RFD GREEN


YELLOW

GREEN

RED

2 x 3W Max. 6W YELLOW RED YELLOW

0,75 W

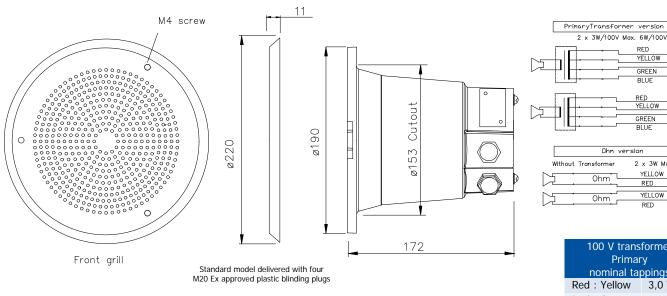

ENGLAND

DNH WW Ltd


100 V transformer **Primary** nominal tappings 3,0 W Red: Yellow Red: Green 1,5 W

Red : Blue

Nemko 10ATEX1050:



II2G Ex de IIB+H2 T6 Gb -20°C ≤ Ta +50°C

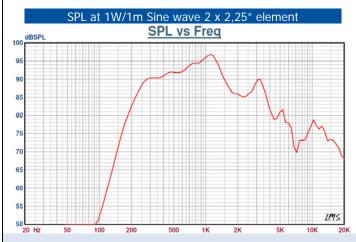

Specifications	
Material / Color	Aluminum / RAL 9010
Mounting	3 screws
Termination	e-chamber, screw terminals
Weight w/transformer	3,1
IP-rating	54
Max. / min. amb. temp	50°C / -20°C
Rated / max. power	3 W / 2x3 W
SPL 1W/1m	83 dB
SPL rated power	87 dB
Effective freq. range	190 – 15000 Hz
Dispersion (-6dB) 1kHz / 4kHz	113° / 40°
Directivity factor, Q 1kHz	3,2
Options	Impedance, colors, labels

Installation, Operation and Maintenance Procedures

- Two separate loudspeakers, two transformers and two terminals in one Ex housing. (A and B system)
- Connect the speakers to the same phase.
- Open the e-chamber by loosening the screws on the lid.
- Lead cable through cable gland and connect to the terminal according to required tapping.
- If earthing, use the specially marked screws.
- Fasten lid screws with a torque of 2Nm to assure the IP rating.
- Secure the loudspeaker to ceiling or wall by three screws (Not enclosed).
- Screw the grille to the speaker with three self-tapping screws (enclosed) max 3,5Nm.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as
- Use only certified / specified cable glands and blanking plugs.
- Standard model delivered with four M20 Ex approved plastic blinding plugs.
- Do <u>not</u> open the loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.

Rev. 09.04.2019