



DNH

HEAD OFFICE, NORWAY
DNH AS

Phone..... + 47 35 98 56 00
Fax..... + 47 35 98 56 10
E-mail..... dnh@dnh.no
Web-site..... www.dnh.no

ENGLAND

DNH WW Ltd

Phone..... + 44 1908 275 000
Fax..... + 44 1908 275 100
E-mail..... dnh@dnh.co.uk

GERMANY

DNH GmbH

Phone... + 49 040 6569 30-0
Fax..... + 49 040 6569 30-30
E-mail..... dnh@dnh.de




USA

DNH Speakers Inc


Phone..... + 1 484 494 5790
Fax..... + 1 484 494 5793
E-mail..... dnh@dnhspeakers.com

CP-50T

ISO 9001 CERTIFIED

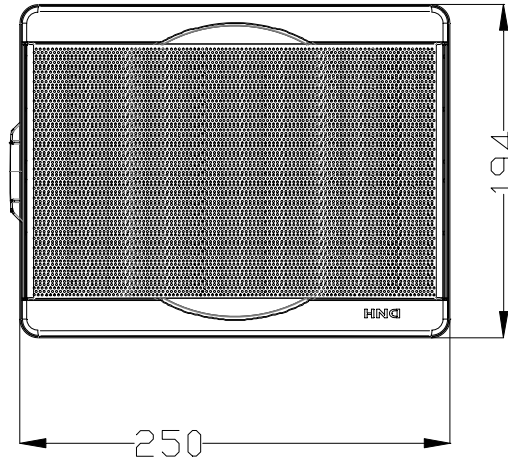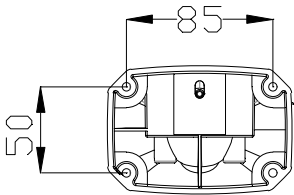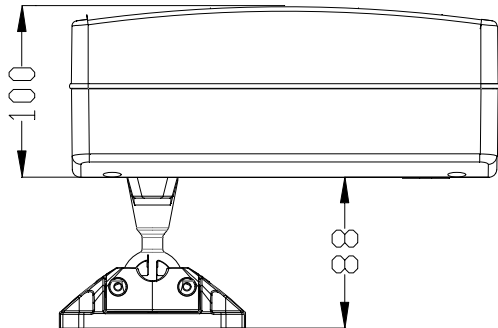


CONNECTION DIAGRAM

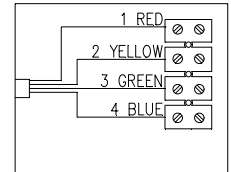

100V transformer
Primary nominal
tappings

Red	Yellow	50,0 W
Yellow	Green	25,0 W
Green	Blue	12,5 W
Red	Green	9,0 W
Yellow	Blue	4,5 W
Red	Blue	3,0 W

Sound pressure levels at 1W/1m
SPL vs Freq

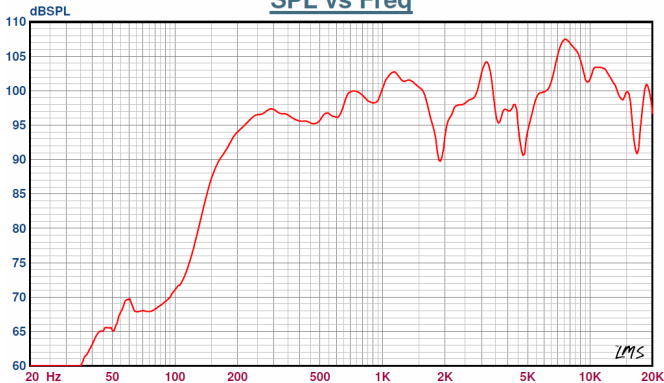

Specifications

Material / Color	Plastic /black
Mounting	Swivel Bracket
Termination	Screw terminal
Weight w/transformer	2,3 Kg
IP-rating	
Max. / min. amb. temp	90°C / -25°C
Rated power	50W
SPL 1W/1m	98 dB
SPL rated power	115 dB
Effective freq. range	150 – 20000 Hz
Dispersion (-6dB) 1kHz / 4kHz	
Directivity factor, Q	
Options	Impedances, colors, labels

Installation, Operation and Maintenance Procedures

- Unscrew the lid, lead cable through cable gland and connect to terminal.
- Tighten cable gland and screw termination chamber lid.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.



DNH reserves the right to alter specifications without notice.