



DNH

HEAD OFFICE, NORWAY
DNH AS

Phone..... + 47 35 98 56 00
Fax..... + 47 35 98 56 10
E-mail..... dnh@dnh.no
Web-Site..... www.dnh.no

ENGLAND
DNH WW Ltd

Phone..... + 44 1908 275 000
Fax..... + 44 1908 275 100
E-mail..... dnh@dnh.co.uk

GERMANY
DNH GmbH




Phone... + 49 040 6569 30-0
Fax..... + 49 040 6569 30-30
E-mail..... dnh@dnh.de

USA
DNH Speakers Inc


Phone..... + 1 484 494 5790
Fax..... + 1 484 494 5793
E-mail..... dnh@dnhspeakers.com

ISO 9001 CERTIFIED


MC-15(T)

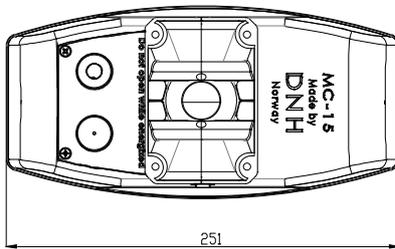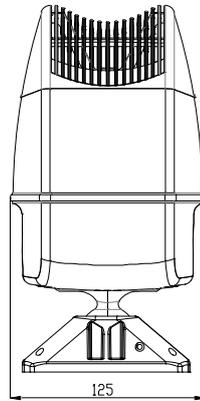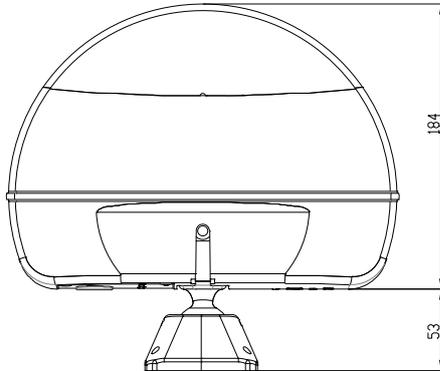


Swivel Bracket

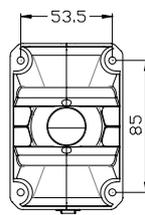


Bracket

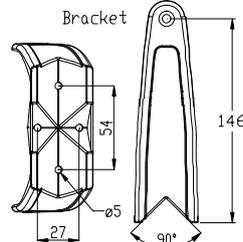

CIRCUIT DIAGRAM

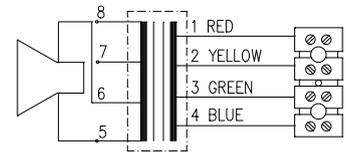

Low impedance

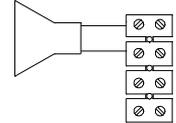

100 Volt transformer
Primary connections

Red : Yellow	15,0 W
Yellow : Green	7,5 W
Green : Blue	3,5 W
Red : Green	2,5 W
Yellow : Blue	1,2 W
Red : Blue	0,75 W

Sound pressure levels at 1W/1m
SPL vs Freq



Specifications

Material / Color	ABS-PC / V0 /RAL7035
Mounting	Bracket
Termination	Screw terminal in termination chamber
Weight w/transformer	1,3Kg
Max. / min. amb. temp	90°C / -40°C
Rated power	15W
SPL 1W/1m	87 dB
SPL rated power	100 dB
Effective freq. range	100 – 20000 Hz
Options	Impedances, colors, labels

Installation, Operation and Maintenance Procedures

- Unscrew lid, lead cable through cable gland and connect to terminal according to required power.
- Tighten cable gland and fasten termination chamber lid with a torque of 1-2 Nm to assure IP grade.
- Fasten the bracket to wall or ceiling with four screws.
- To change the position of the loudspeaker, loose two screws on the side of the bracket, adjust as required and tighten.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.

DNH reserves the right to alter specifications without notice.

