



Web-Site..... www.dnh.no

.....dnh@dnh.no

DSP-25EExmN(T)


ENGLAND DNH WW Ltd

Phone.....+ 44 1908 275 000 Fax.....+ 44 1908 275 100 E-mail.....dnh@dnh.co.uk

GERMANY DNH GmbH

<u>USA</u> DNH Speakers Inc

Phone.....+ 1 484 494 5790 Fax....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

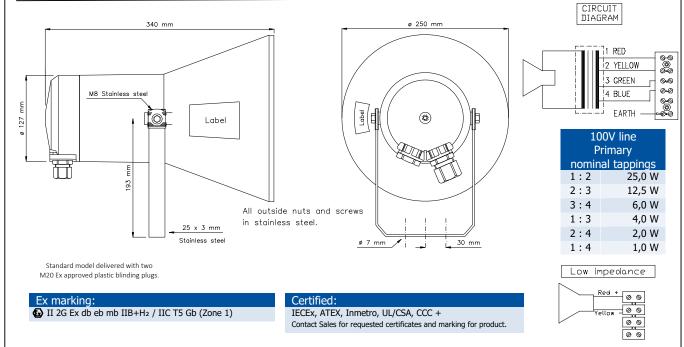

dBSPL		pressur	SPL	۷S	req			
					\sim			
5					\mathcal{N}			
•						1 Y	γ	
5							W	
0								
5								
•				+				
5								1
0								\mathbb{H}
5		_/		\perp				14 V

Specifications	IIB	IIC		
Material / Color	Anti-static polyamide / Black			
Mounting	Bracket			
Termination	e-chamber, screw terminals			
Weight w/transformer	4,0 kg			
IP-rating (e-chamber)	66			
Max. / min. amb. temp	55°C / -50°C			
Rated power	25 W			
SPL 1W/1m	108 dB	105 dB		
SPL rated power	120 dB	116 dB		
Effective freq. range	370 – 7500 Hz	400-7000		
Dispersion (-6dB) 1kHz / 4kHz	98° / 29°	100° / 30°		
Directivity factor, Q 1kHz	3,7			
Options	Impedances, labels, transformers			

Installation, Operation and Maintenance Procedures

- Remove lid by one screw, lead cable through the cable gland and connect to terminal with required tapping.
- Screw lid back into place by one screw with a torque of 3Nm to assure the IP rating.
- Fasten bracket with one to three screws.
- To change the position of the loudspeaker, please adjust the standard U- bracket (by loosening / tightening the screws) as required.
- Use only certified/specified cable glands and blanking plugs, reflecting the same IP rating and temperature range as the loudspeaker.
- Standard model delivered with two M20 Ex approved plastic blinding plugs.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.

CE