



### **SAFE-561(T)**

#### ENGLAND DNH WW Ltd

Phone...... + 44 1908 275 000 Fax.....+ 44 1908 275 100 Web-Site......dnh@dnh.co.uk


## GERMANY DNH GmbH

Phone... + 49 040 6569 30-0 Phone.......... + 1 484 494 5790 Fax...... + 49 040 6569 30-30 E-mail.....dnh@dnh.de

> Circuit diagram

# USA DNH Speakers Inc


Fax.....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

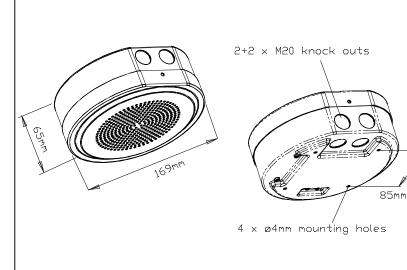

Line in Ь Term.fuse.130°C green 0,5W 1,5W 3,0W

BS5839 Part 8 VA compliant

Secondary nominal tappings	
C: 6,0W	6,0 W
C: 3,0W	3,0 W
C: 1,5W	1,5 W
C: 0,5W	0,5 W

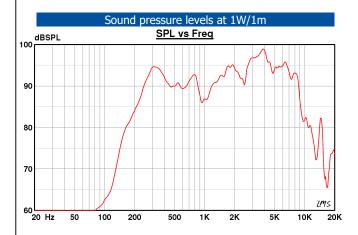

Specifications	
Material / Color	Steel / White Ral 9010
Mounting	Four screws
Termination	Ceramic terminal
Weight w/transformer	1,2 kg
IP-rating	32C
Max. / min. amb. temp	110°C / -20°C
Rated power	6W
SPL 1W/1m	90 dB
SPL rated power	97 dB
Effective freq. range	180 – 13000 Hz
Dispersion (-6dB) 1kHz / 4kHz	187° / 77°
Directivity factor, Q	1,9
Options	Impedances, colors, labels

#### **Installation, Operation and Maintenance Procedures**

- Mount cabinet to wall/ceiling with four suitable screws. Lead cable through cable gland.
- If 70V, replace red cable with the green cable in the terminal.
- Connect to terminal and select required tapping.
- Fasten the front part to the cabinet with two provided screws.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as
- Transformer according to British standard 5839.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.