

Installation, Operation and Maintenance Procedures

IMS

Options

Two separate loudspeakers, two transformers and two terminals in one Ex housing. (A & B system)

10K

Enter the e-chamber by loosening the screws on the lid and terminate cable in the screw terminal.

5K

Connect the speakers to the same phase.

55

50 L

CE

50

100

200

500

- If earthing, earth correctly using the specially marked screws.
- Fasten lid screws with a torque of 2Nm to assure the IP rating.

1K

2K

- Secure the loudspeaker to ceiling or wall by four screws by use of the extruded aluminum brackets on each side.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Use only certified / specified cable glands and blanking plugs.
- Standard model delivered with four M20 Ex approved plastic blinding plugs.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.

Impedances, labels