



DNH

HEAD OFFICE, NORWAY
DNH AS

Phone..... + 47 35 98 56 00
E-mail..... dnh@dnh.no
Web-Site..... www.dnh.no

ENGLAND

DNH WW Ltd

Phone..... + 44 1908 275 000
Fax..... + 44 1908 275 100
E-mail..... dnh@dnh.co.uk

GERMANY

DNH GmbH

Phone... + 49 040 6569 30-0
Fax..... + 49 040 6569 30-30
E-mail..... dnh@dnh.de



USA

DNH Speakers Inc

Phone..... + 1 484 494 5790
Fax..... + 1 484 494 5793
E-mail..... dnh@dnhspeakers.com

DSP-15-54T-MED

ISO 9001 CERTIFIED

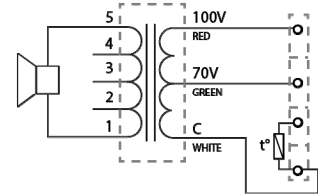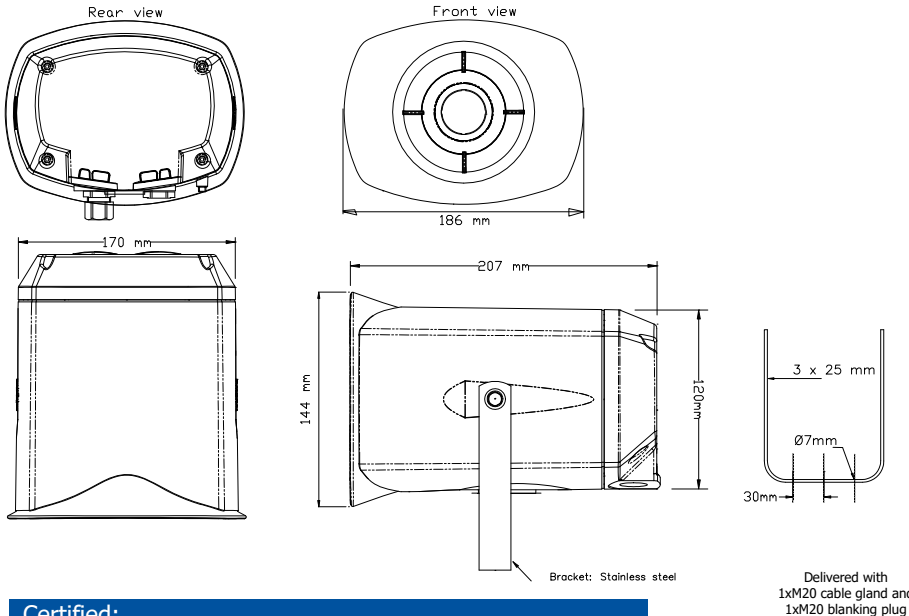

Tested acc. To EN54-24Type: B
Manufactured by DNH A/S
Kragerø, Norway
15 1438-CPR-0407

T-48 transformer max 15W

C : 1	15,0 W, Imp. 770 Ω
C : 2	7,5 W, Imp. 1250 Ω
C : 3	4,0 W, Imp. 1667 Ω
C : 4	2,0 W, Imp. 2500 Ω


Certified:

MED B, EN-54-24.

Contact Sales for requested certificates and marking for product

Sound pressure levels at 1W/1m (MP-28-54)

SPL vs Freq

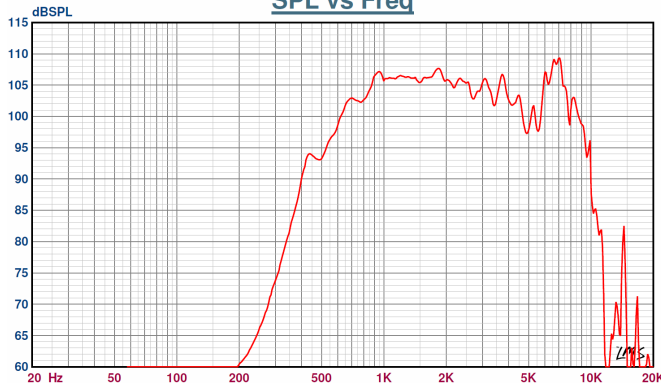

Horizontal / vertical coverage angles

1 Oct. Pink noise	500Hz	190°
1 Oct. Pink noise	1KHz	125°
1 Oct. Pink noise	2KHz	67°
1 Oct. Pink noise	4KHz	44°

Specifications

Material / Color	PC-ABS / RAL 7035
Mounting	Bracket
Termination	screw or push terminals
Weight w/transformer	1,8 kg
IP-rating	67
Max. / min. amb. temp	90°C / -40°C
Rated / max. power	15 W
SPL 1W/1m	106 dB
Freq. range	350 – 11000 Hz
Safe Compass distance	1,25 m
Measurement environment	Free field

Sensitivity 315Hz-10KHz 1/3 Oct. Pink noise 1W/4 Meters

315Hz: 50 dB	400Hz: 61 dB	500Hz: 67 dB
630Hz: 72 dB	800Hz: 76 dB	1KHz: 78 dB
1250Hz: 78 dB	1600Hz: 78 dB	2KHz: 79 dB
2500Hz: 79 dB	3150Hz: 79 dB	4KHz: 76 dB
5KHz: 73 dB	6300Hz: 77 dB	8KHz: 76 dB
10KHz: 70 dB		

Installation, Operation and Maintenance Procedures

- Remove lid by four screws, lead cable through the cable gland and connect to terminal. (White: Green 70V or White: Red 100V)
- Select required tapping on the transformer.
- Screw lid back into place by four screws with a torque of 1.3 – 1.8 Nm to assure the IP rating.
- To change the position of the loudspeaker, please adjust the standard U- bracket (by loosening / tightening the screws) as required.
- DSP-15-54-MED can be supplied with three different bracket systems, according to customer requirements.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with a two year warranty against defective workmanship.

DNH reserves the right to alter specifications without notice

