




MC-50 T-MED


<u>ENGLAND</u>	<u>GERMANY</u>	
DNH WW Ltd	DNH GmbH	
Phone+ 44 1908 275 000	Phone + 49 (


Phone... + 49 040 6569 30-0 Fax..... + 49 040 6569 30-30 E-mail.....dnh@dnh.de


USA DNH Speakers Inc

Phone.....+ 1 484 494 5790 Fax.....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

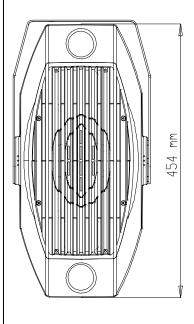


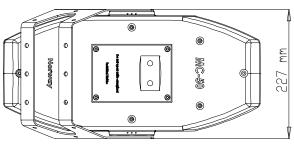

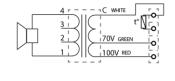

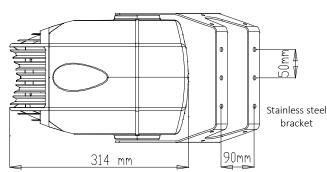

70/100 Volt combined transformer Primary connections		
White: Green	70 V	
White: Red	100 V	
Secondary nominal tappings		
1:4	50,0 W	
1:3	27,0 W	
2:4	18,0 W	
1:2	15,0 W	
3:4	7,5 W	
2:3	3,5 W	

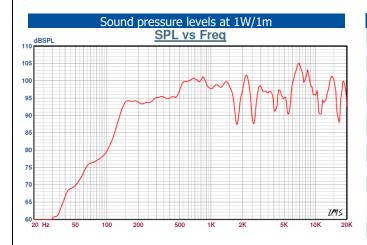

Specifications		
Material / Color	ASA / RAL 7035	
Mounting	Bracket	
Termination	Screw terminal in termination chamber	
Weight w/transformer	6,2 Kg	
IP-rating	54	
Max. / min. amb. temp	90°C / -40°C	
Rated power	50 W	
SPL 1W/1m	98 dB	
SPL rated power	115 dB	
Effective freq. range	90 – 20000 Hz	
Dispersion (-6dB) 1kHz / 4kHz	Horizontal 84°/105° Vertical 127°/105°	
Directivity factor, Q	Horizontal 4,3 Vertical 2,8	
Safe Compass distance	2,3 m	
Options	colors, labels	
Rated power SPL 1W/1m SPL rated power Effective freq. range Dispersion (-6dB) 1kHz / 4kHz Directivity factor, Q Safe Compass distance	50 W 98 dB 115 dB 90 – 20000 Hz Horizontal 84°/105° Vertical 127°/105° Horizontal 4,3 Vertical 2,8 2,3 m	

Installation, Operation and Maintenance Procedures

- Unscrew the lid by four screws, lead the cable through cable the gland and connect to terminal (70V or 100V), select required tapping into the transformer.
- Tighten cable gland and fasten termination chamber lid with a torque of 1-2 Nm to assure IP grade.
- Fasten the bracket to wall or ceiling with three screws.
- To change the position of the loudspeaker, please adjust the bracket (by loosening / tightening the screws) as required.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.