



Web-Site..... www.dnh.no

# H-62S(T)

### ENGLAND DNH WW Ltd


Phone......+ 44 1908 275 000 Fax.....+ 44 1908 275 100 E-mail.....dnh@dnh.co.uk


## GERMANY DNH GmbH

#### USA DNH Speakers Inc


Phone......+ 1 484 494 5790 Fax....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

CIRCUIT DIAGRAM

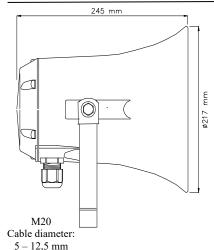


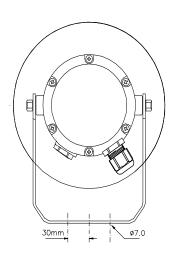

Bracket and all outside nuts and bolts in stainless steel

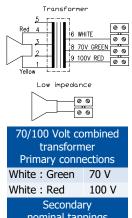

Secondary nominal tappings	
1:4	25,0W
1:3	12,5W
2:4	8,0W
1:2	7,0 W
3:4	3,0W
2:3	1,7W

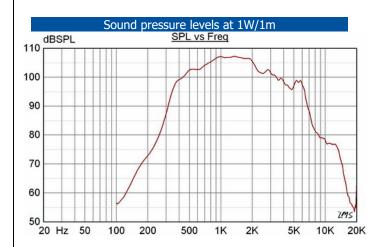

Specifications	
Material / Color	Aluminum / RAL7035
Mounting	Bracket
Termination	Screw terminal
Weight w/transformer	3,9 kg
IP-rating	55
Max. / min. amb. temp	150°C / -50°C
Rated power	25 W
SPL 1W/1m	109 dB
SPL rated power	122 dB
Effective freq. range	300 – 7000 Hz
Dispersion (-6dB) 1kHz / 4kHz	115° / 30°
Options	Impedances, colors, labels

#### **Installation, Operation and Maintenance Procedures**

- Fasten the loudspeaker to the wall with three screws on the bracket.
- To change the position of the loudspeaker, please adjust the bracket (by loosening / tightening the screws) as required.
- Open the lid by six crews.
- Connect to terminal (70V or 100V) and select required tapping into the transformer.
- Fasten lid with a torque of 2 3 Nm.
- H-62S is designed to withstand sound shocks (maximum 175 dB)
- The aluminum surface of the loudspeaker should be regularly treated with paint at the same interval as with other similar outdoor equipment.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open while energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.

 $\epsilon$