

٤

110

10

100

95

90

84

70

65

60



DNH AS Phone...... + 47 35 98 56 00 E-mail...... dnh@dnh.no Web-Site...... www.dnh.no

<u>ENGLAND</u> DNH WW Ltd

Phone......+ 44 1908 275 000 Fax.....+ 44 1908 275 100 E-mail......dnh@dnh.co.uk


GERMANY DNH GmbH

Phone... + 49 040 6569 30-0 Fax..... + 49 040 6569 30-30 E-mail...... dnh@dnh.de

BP-660(T)

DNH Speakers Inc

Phone......+ 1 484 494 5790 Fax.....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

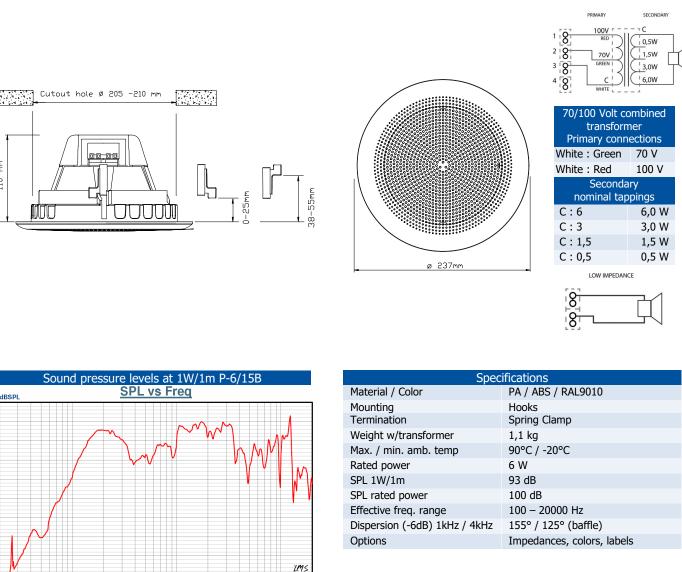

Installation, Operation and Maintenance Procedures

- Install the ring into the cutout hole turning the screws connected to the three hooks, screw clockwise until the ring is fixed to the ceiling.
- Connect to terminal (70V or 100V) and select required on the transformer.
- Turn the grille gently clockwise within the ring until it stops.
- Hooks can be mounted both ways, see drawing at the top of the page.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do <u>not</u> open loudspeaker when energized.

200

500

This loudspeaker is supplied with two years warranty against defective workmanship.

5K