




BP-660(T) A+B


GERMANY DNH WW Ltd DNH GmbH Phone......+ 44 1908 275 000


Phone... + 49 040 6569 30-0 Fax..... + 49 040 6569 30-30 E-mail.....dnh@dnh.de


USA DNH Speakers Inc


Phone.....+ 1 484 494 5790 Fax.....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

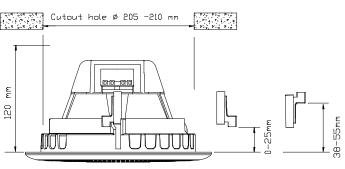

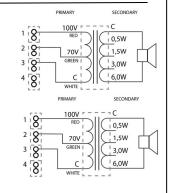

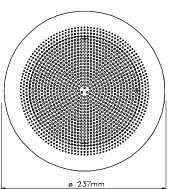

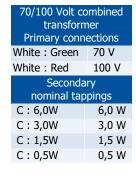

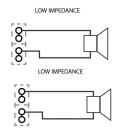

00 00 00 00 00 00 00 00 00 00 00 00 00	50 20 Hz	50	100	200	500	1K	2K	5K	10K	7_MS
05 00 95 90 90 85 80 75	55									
35 30 30 30	70									
00 00 00 00 00 00 05 05	75									
55 00 00 00 00 00 00 00 00 00 00 00 00 0	80								V	\
	15							Y		₩
	00				لىمى			M V	١,	1
5	5					\nearrow	- John	\bigwedge	·Λ	
5	0						ν Λ			
SPL vs Freq	5 dBSPL			_						

Specifications					
Material / Color	PA / ABS / RAL9010				
Mounting	Hooks				
Termination	Spring Clamp				
Weight w/transformer	1,1 kg				
IP-rating	N/A				
Max. / min. amb. temp	90°C / -20°C				
Rated / max. power	6 W / 2x6 W				
SPL 1W/1m	93 dB / 96 dB				
SPL rated power	99 dB / 102 dB				
Effective freq. range	240 – 15000 Hz				
Dispersion (-6dB) 1kHz / 4kHz	91° / 62°				
Directivity factor, Q 1kHz	4				
Options	Impedances, colors, labels				

Installation, Operation and Maintenance Procedures

- Two separate loudspeakers, two transformers and two terminals (A + B system).
- A + B system should be connected the same way so that systems are in phase.
- Install the ring into the cut-out hole turning the screws connected to the three hooks, screw clockwise until the ring is fixed to the ceiling.
- Connect cable to terminal 70V or 100V
- Turn the grille gently clockwise within the ring until it stops.
- Hooks can be mounted both ways, see drawing at the top of the page.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as
- Do <u>not</u> open loudspeaker when energized.
- This loudspeaker is supplied with 2 year warranty against defective workmanship.