



DNH AS Phone.....+ 47 35 98 56 00 E-mail.....dnh@dnh.no Web-Site..... www.dnh.no

ENGLAND **DNH WW Ltd**

Phone.....+ 44 1908 275 000 Fax.....+ 44 1908 275 100 E-mail.....dnh@dnh.co.uk

GERMANY **DNH GmbH**

Phone... + 49 040 6569 30-0 Fax..... + 49 040 6569 30-30 E-mail.....dnh@dnh.de

BPF-560(T)

DNH Speakers Inc

PRIMARY

100\

Phone...... + 1 484 494 5790 Fax.....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

> transformer Primary connections

> > Secondary

nominal tappings

LOW IMPEDANCE

SECONDARY C

0,5W

1,5W

3,0W ! 6,0W

70 V


100 V

6,0 W

3,0 W

1,5 W

0,5 W

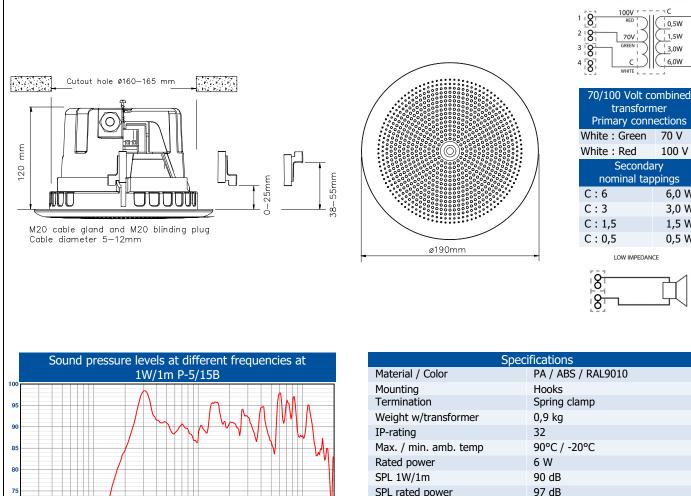

Installation, Operation and Maintenance Procedures

- Install the ring into the cut-out hole turning the screws connected to the three hooks, screw clockwise until the ring is fixed to the ceiling.
- Lead cable into the box, connect to terminal (70V or 100V) and select required tapping in to the transformer.

IMS

10K

Screw box back into place with one screw.

500

1K

70 65

60 20 Hz

- Turn the grille gently clockwise within the ring until it stops.
- Hooks can be mounted both ways, see drawing at the top of the page.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.

5K

CE

Specifications	
PA / ABS / RAL9010	
Hooks	
Spring clamp	
0,9 kg	
32	
90°C / -20°C	
6 W	
90 dB	
97 dB	
190 – 20000 Hz	
160° / 55° (baffle)	
Impedances, colors, labels	