



HEAD OFFICE, NORWAY DNH AS

Phone...... + 47 35 98 56 00 E-mail...... dnh@dnh.no Web-Site..... www.dnh.no

<u>ENGLAND</u> DNH WW Ltd


Phone...... + 44 1908 275 000 Fax...... + 44 1908 275 100 E-mail......dnh@dnh.co.uk

<u>GERMANY</u> DNH GmbH

Phone... + 49 040 6569 30-0 Fax..... + 49 040 6569 30-30 E-mail......dnh@dnh.de

<u>USA</u> DNH Speakers Inc

DSP-15(T)

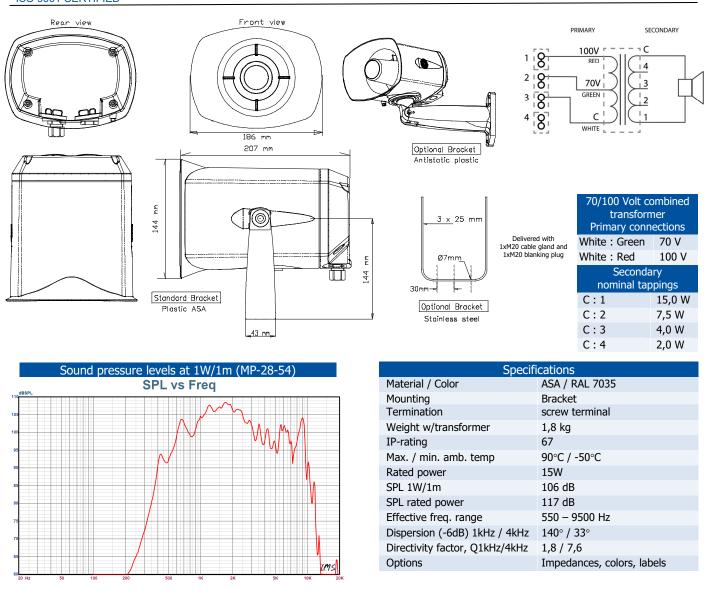

Installation, Operation and Maintenance Procedures

- Remove lid by four screws, lead cable through the cable gland and connect to the terminal. (White:Green 70V or White:Red 100V)
- Select required tapping on the transformer.
- Check that the gasket is fitted correctly on to the lid. Do not use any lubricants on the gasket.
- Screw lid back into place by four screws with a torque of 1.3 1.8 Nm to assure the IP rating.
- To change the position of the loudspeaker, please adjust the standard U- bracket (by loosening / tightening the screws) as required.
- DSP-15(T) can be supplied with three different bracket systems, according to customer requirements.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do <u>not</u> open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.

CE