



DNH

HEAD OFFICE, NORWAY
DNH AS

Phone..... + 47 35 98 56 00
E-mail..... dnh@dnh.no
Web-Site..... www.dnh.no


ENGLAND
DNH WW Ltd
Phone..... + 44 1908 275 000
Fax..... + 44 1908 275 100
E-mail..... dnh@dnh.co.uk

GERMANY
DNH GmbH
Phone... + 49 040 6569 30-0
Fax..... + 49 040 6569 30-30
E-mail..... dnh@dnh.de



BPF-260(T)

USA
DNH Speakers Inc
Phone..... + 1 484 494 5790
Fax..... + 1 484 494 5793
E-mail..... dnh@dnhspeakers.com

ISO 9001 CERTIFIED

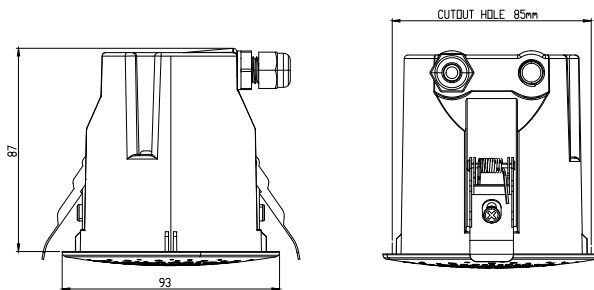

Ceiling thickness 1-30mm

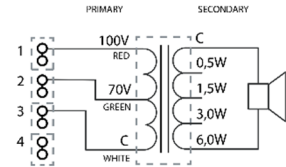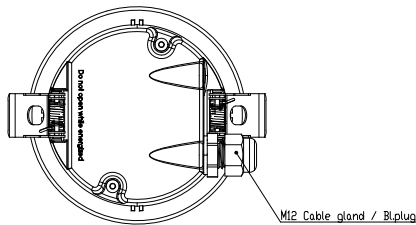

70/100 Volt combined transformer
Primary connections

White : Green 70 V
White : Red 100 V


Secondary nominal tapings

C : 6	6,0 W
C : 3	3,0 W
C : 1,5	1,5 W
C : 0,5	0,5 W

LOW IMPEDANCE



Sound pressure levels at 1W/1m
SPL vs Freq

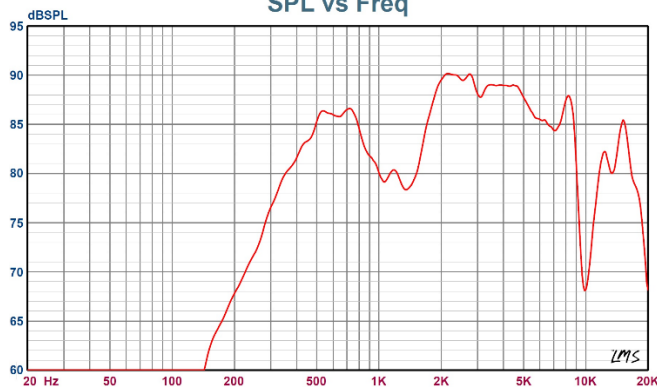

Specifications

Material / Color	PC/ABS / RAL9010
Mounting	Springs
Termination	Spring clamps
Weight w/transformer	0,3 kg
IP-rating	54
Max. / min. amb. temp	90°C / -30°C
Rated / max. power	6W / 6W
SPL 1W/1m	85 dB
SPL rated power	92 dB
Effective freq. range	290 - 19000 Hz

Installation, Operation and Maintenance Procedures

- Remove box trough two screws.
- Lead cable trough the cable gland and connect to terminal.
- Install box back to the loudspeaker by two screws.
- Mount the complete loudspeaker by bending two spring clamps toward the box and inserting into the ceiling hole.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.

DNH reserves the right to alter specifications without notice.

