



DNH AS Phone...... + 47 35 98 56 00 E-mail...... dnh@dnh.no Web-Site...... www.dnh.no

## <u>ENGLAND</u> DNH WW Ltd

Phone......+ 44 1908 275 000 Fax.....+ 44 1908 275 100 E-mail......dnh@dnh.co.uk

## <u>GERMANY</u> DNH GmbH

Phone... + 49 040 6569 30-0 Fax..... + 49 040 6569 30-30 E-mail...... dnh@dnh.de


## LP-210(T)

DNH Speakers Inc

PRIMARY

Phone......+ 1 484 494 5790 Fax.....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

SECONDARY

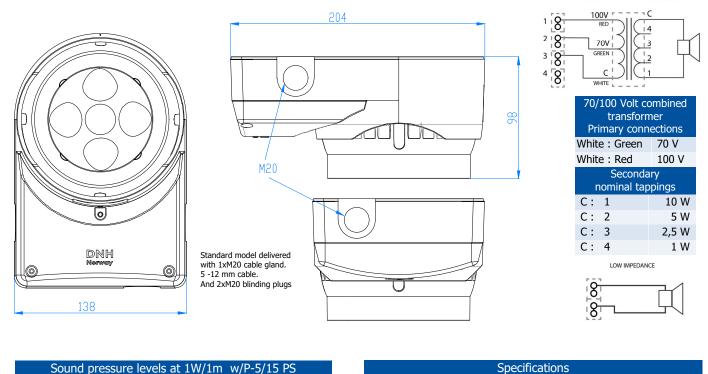



Specifications	
Material / Color	Polyamide UL94 V0 / RAL 7035
Mounting	Screws and keyhole
Termination	Spring clamp
Weight w/transformer	1 Kg
IP-rating	56
Max. / min. amb. temp	110°C / -50°C
Rated power	10 W
SPL 1W/1m	101 dB
SPL rated power	111 dB
Effective freq. range	300 – 20000 Hz
Options	Impedances, colors, labels

## Installation, Operation and Maintenance Procedures

- Remove the front lid by three screws.
- Screw the loudspeaker to wall or ceiling by three screws.
- Lead cable through cable gland, connect to terminal (70V or 100V) and select required tapping in to the transformer.
- To change the direction of the loudspeaker, adjust the sound unit into the required direction.
- Screw the lid back into place by three screws to secure the lid and hold the loudspeaker in the selected direction.
- The lid must be loosened before adjusting the direction of the loudspeaker.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do <u>not</u> open the loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.