



# DNH

HEAD OFFICE, NORWAY

**DNH AS**

Phone..... + 47 35 98 56 00

E-mail..... dnh@dnh.no

Web-Site..... www.dnh.no

ENGLAND

**DNH WW Ltd**

Phone..... + 44 1908 275 000

Fax..... + 44 1908 275 100

E-mail..... dnh@dnh.co.uk

GERMANY

**DNH GmbH**

Phone... + 49 040 6569 30-0

Fax..... + 49 040 6569 30-30

E-mail..... dnh@dnh.de

## SAFE-m6(T)

USA



**DNH Speakers Inc**

Phone..... + 1 484 494 5790


Fax..... + 1 484 494 5793

E-mail..... dnh@dnhspeakers.com


ISO 9001 CERTIFIED

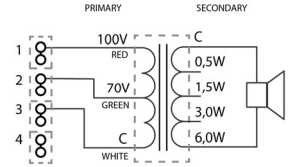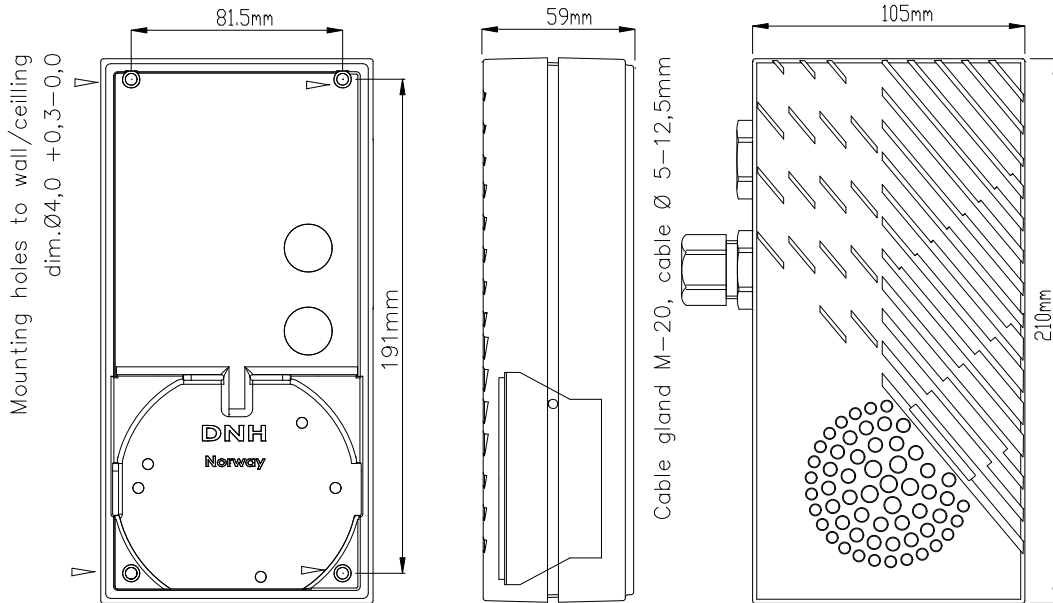

70/100 Volt combined transformer	
Primary connections	
White : Green	70 V
White : Red	100 V
Secondary nominal tapings	
C : 6	6,0 W
C : 3	3,0 W
C : 1,5	1,5 W
C : 0,5	0,5 W

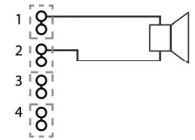

Sound pressure levels at 1W/1m  
**SPL vs Freq**

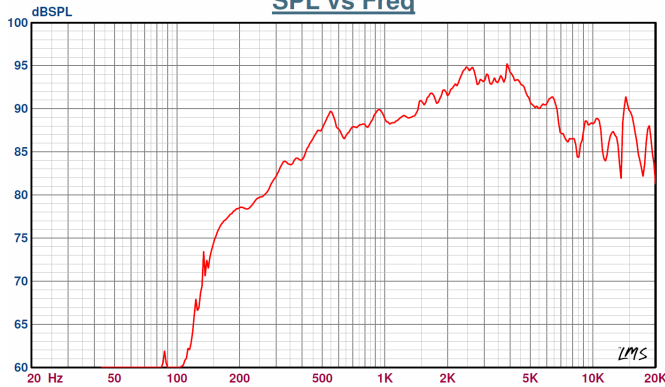

**Specifications**

Material / Color	Aluminum / RAL9010 or RAL3000
Mounting	4 screws
Termination	Spring clamp
Weight w/transformer	1,35 kg
IP-rating	56(Terminal chamber)
Max. / min. amb. temp	100°C / -40°C
Rated power	6 W
SPL 1W/1m	89 dB
SPL rated power	97 dB
Effective freq. range	160 – 20000 Hz
Dispersion (-6dB) 1kHz / 4kHz	165° / 110°
Options	Impedances, colors, labels

### Installation, Operation and Maintenance Procedures

- Open the cabinet using the enclosed Allen key to loosen the screws on three sides of the cabinet.
- Lead cable through the cable gland and connect to terminal 70V (white – green) or 100V (white – red).
- Choose required power on the transformer.
- Fasten the mounting plate to wall or ceiling by four screws.
- Close the cabinet by fasten three screws on three sides of the cabinet.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.

DNH reserves the right to alter specifications without notice.

