



DNH

HEAD OFFICE, NORWAY
DNH AS

Phone..... + 47 35 98 56 00
E-mail..... dnh@dnh.no
Web-Site..... www.dnh.no

ENGLAND
DNH WW Ltd

Phone..... + 44 1908 275 000
Fax..... + 44 1908 275 100
E-mail..... dnh@dnh.co.uk

GERMANY
DNH GmbH


Phone... + 49 040 6569 30-0
Fax..... + 49 040 6569 30-30
E-mail..... dnh@dnh.de

USA
DNH Speakers Inc

Phone..... + 1 484 494 5790
Fax..... + 1 484 494 5793
E-mail..... dnh@dnhspeakers.com

ISO 9001 CERTIFIED

SAFE-15T-MED

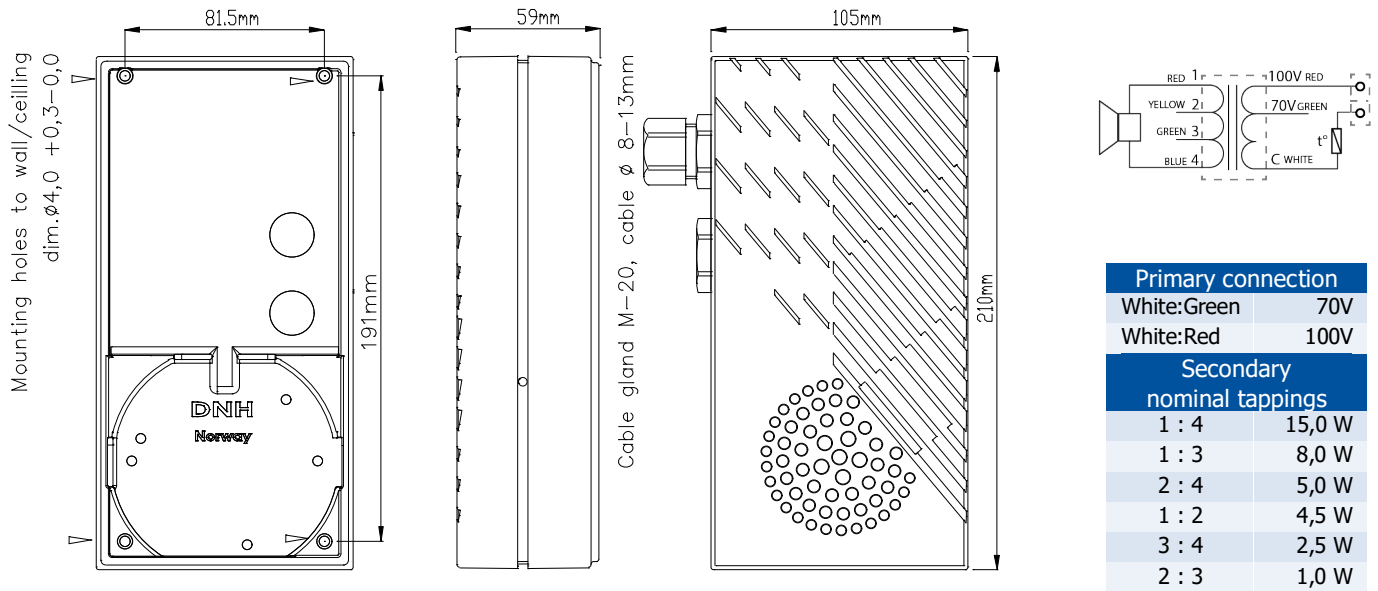

Sound pressure levels at 1W/1m
SPL vs Freq



Specifications

Material / Color	Aluminum / White /Red
Mounting	4 screws
Termination	Ceramic terminal
Weight w/transformer	1,7 kg
IP-rating	67
Max. / min. amb. temp	110°C / -50°C
Rated power	15 W
SPL 1W/1m	101 dB
SPL rated power	113 dB
Effective freq. range	500 – 6000 Hz
Dispersion (-6dB) 1kHz / 4kHz	175° / 110°
Safe Compass distance	5 m
Options	Colors, labels

Installation, Operation and Maintenance Procedures

- Open the cabinet using the enclosed Allen key to loosen the screws on three sides of the cabinet.
- Lead cable through the cable gland and connect to terminal 70V (white – green) or 100V (white – red).
- Choose required power on the transformer.
- Fasten the mounting plate to wall or ceiling by four screws.
- Close the cabinet by fasten three screws on three sides of the cabinet.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.