



# DNH

HEAD OFFICE, NORWAY

**DNH AS**

Phone..... + 47 35 98 56 00

E-mail..... dnh@dnh.no

Web-Site..... www.dnh.no

ENGLAND

**DNH WW Ltd**

Phone..... + 44 1908 275 000

Fax..... + 44 1908 275 100

E-mail..... dnh@dnh.co.uk

GERMANY

**DNH GmbH**

Phone... + 49 040 6569 30-0

Fax..... + 49 040 6569 30-30

E-mail..... dnh@dnh.de

USA

**DNH Speakers Inc**


Phone..... + 1 484 494 5790

Fax..... + 1 484 494 5793

E-mail..dnh@dnhspeakers.com


ISO 9001 CERTIFIED

## CP-66T-MED

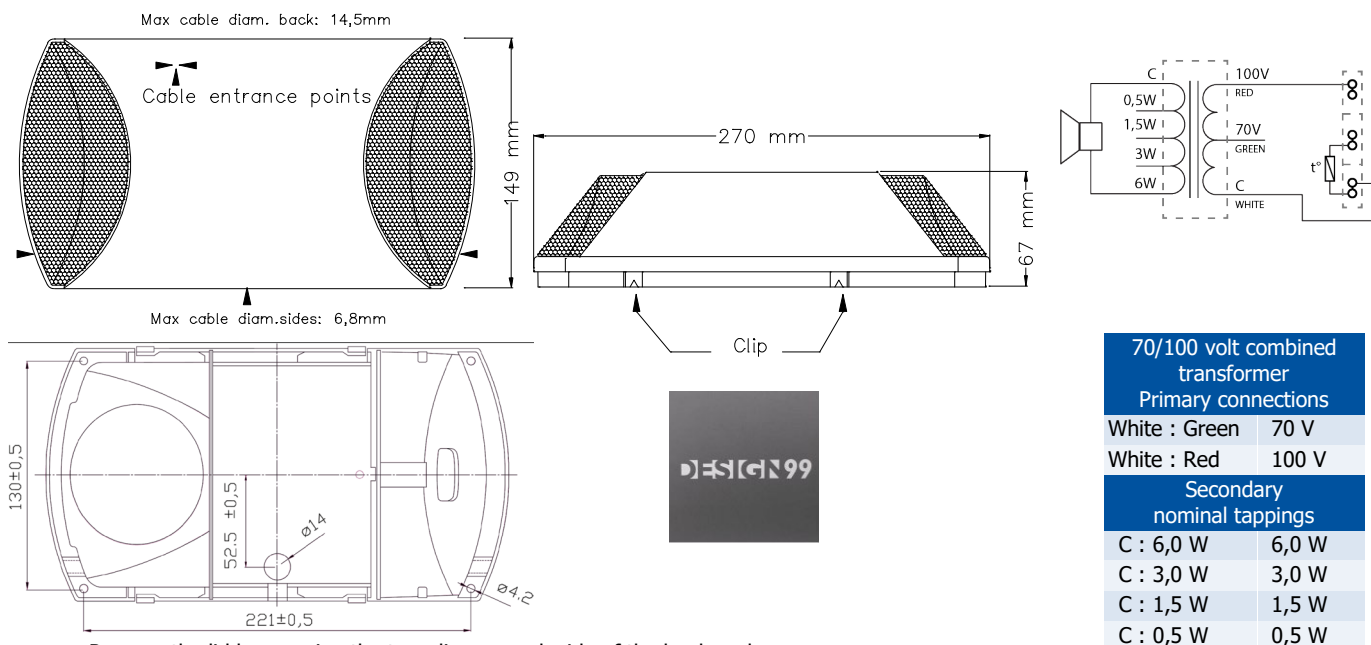

Sound pressure levels at 1W/1m closed 90°

**SPL vs Freq**

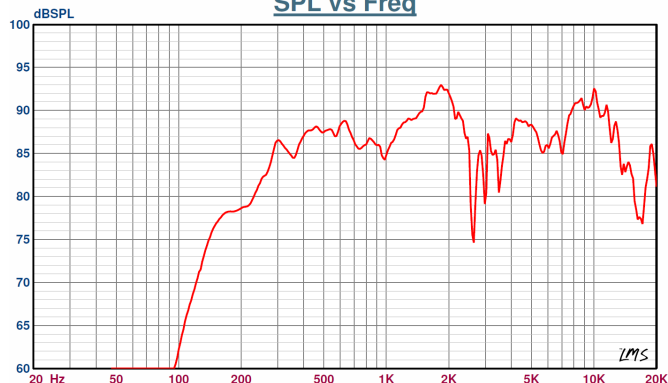

Specifications

|                               |                         |
|-------------------------------|-------------------------|
| Material / Color              | ABS / RAL 9010          |
| Mounting                      | 4 screws                |
| Termination                   | Screw terminal          |
| Weight w/transformer          | 0,77 kg                 |
| IP Rating                     | IP20                    |
| Max. / min. amb. temp         | 90°C / -20°C            |
| Rated power                   | 6 W                     |
| SPL 1W/1m                     | 86 dB                   |
| SPL rated power               | 94 dB                   |
| Effective freq. range         | 140 – 20000 Hz          |
| Dispersion (-6dB) 1kHz / 4kHz | 250° / 195°(horisontal) |
| Safe Compass distance         | 1,6 m                   |
| Options                       | Colors, labels          |

## Installation, Operation and Maintenance Procedures

- To open the loudspeaker, press the two clips on each side of the loudspeaker and separate the cabinet from the chassis.
- Enter the cable through a suitable cable entrance and connect to terminal.
- Fasten the chassis to the wall or roof with four screws.
- Clip the cabinet on to the chassis after termination.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open the loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.

DNH reserves the right to alter specifications without notice.

