



## <u>ENGLAND</u> DNH WW Ltd

Phone......+ 44 1908 275 000 Fax.....+ 44 1908 275 100 E-mail.....dnh@dnh.co.uk

## <u>GERMANY</u> DNH GmbH

Phone... + 49 040 6569 30-0 Fax..... + 49 040 6569 30-30 E-mail...... dnh@dnh.de

## DSP-15T-MED


 DNH Speakers Inc

 Phone.......+ 1 484 494 5790

 Fax......+ 1 484 494 5793

 E-mail..dnh@dnhspeakers.com

ISO 9001 CERTIFIED

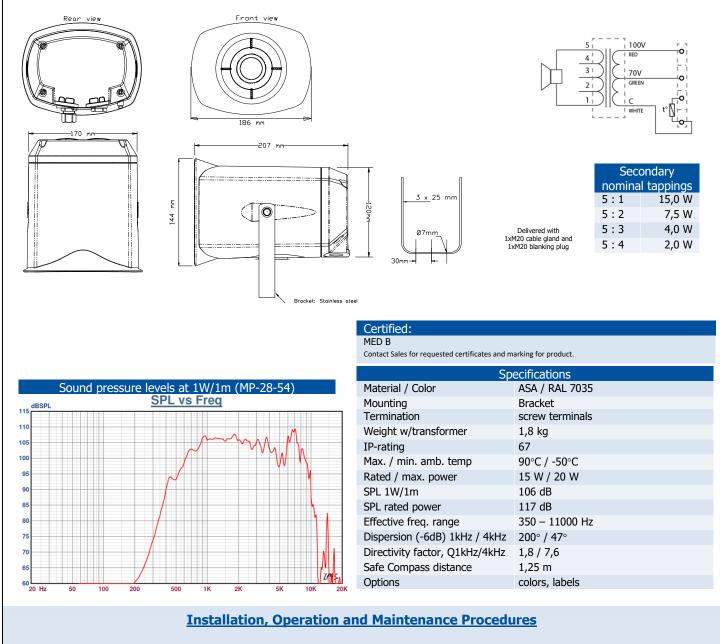

- Remove lid by four screws, lead cable through the cable gland and connect to terminal (White: Green 70V or White: Red 100V)
- Select required tapping on the transformer.
- Screw lid back into place by four screws with a torque of 1.3 1.8 Nm to assure the IP rating.
- To change the position of the loudspeaker, please adjust the standard U- bracket (by loosening / tightening the screws) as required.
- DSP-15(T) can be supplied with three different bracket systems, according to customer requirements.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do <u>not</u> open loudspeaker when energized.
- This loudspeaker is supplied with a two years warranty against defective workmanship.