



VES-561T-MED


ENGLAND DNH WW Ltd


Phone......+ 44 1908 275 000 Fax.....+ 44 1908 275 100 E-mail.....dnh@dnh.co.uk


GERMANY DNH GmbH


USA DNH Speakers Inc

Phone.....+ 1 484 494 5790 Fax....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

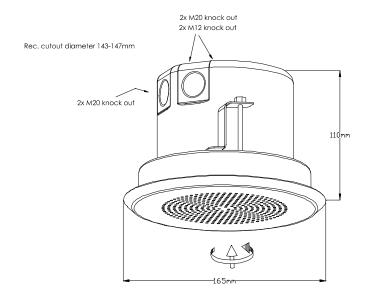



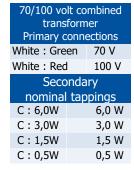

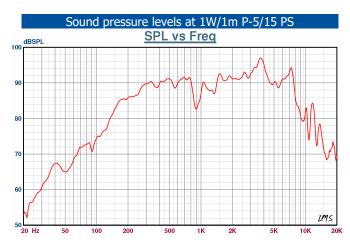

Specifications	
Steel / White	
3 screws	
Screw terminal	
1,1 kg	
32C	
90°C / -20°C	
100 V transformer	
6 W	
90 dB	
97 dB	
100 – 13000 Hz	
160° / 60° (baffle)	
5 m	
colors	

Installation, Operation and Maintenance Procedures

- Install the steel box into the cutout hole turning the screws connected to the three hooks, screw clockwise until
 the ring is fixed to the ceiling.
- Lead cable through cable gland, connect to terminal and select required tapping into the transformer.
- If 70V, replace red cable with the green cable in the terminal.
- Turn the grille gently clockwise within the ring until it stops.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Transformer according to British standard 5839.
- Do <u>not</u> open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.