



DNH

HEAD OFFICE, NORWAY
DNH AS

Phone..... + 47 35 98 56 00
E-mail..... dnh@dnh.no
Web-Site..... www.dnh.no

ENGLAND

DNH WW Ltd

Phone..... + 44 1908 275 000
Fax..... + 44 1908 275 100
E-mail..... dnh@dnh.co.uk

GERMANY

DNH GmbH

Phone... + 49 040 6569 30-0
Fax..... + 49 040 6569 30-30
E-mail..... dnh@dnh.de



USA

DNH Speakers Inc

Phone..... + 1 484 494 5790
Fax..... + 1 484 494 5793
E-mail..dnh@dnhspeakers.com


ISO 9001 CERTIFIED

CAP-15WCR(T)

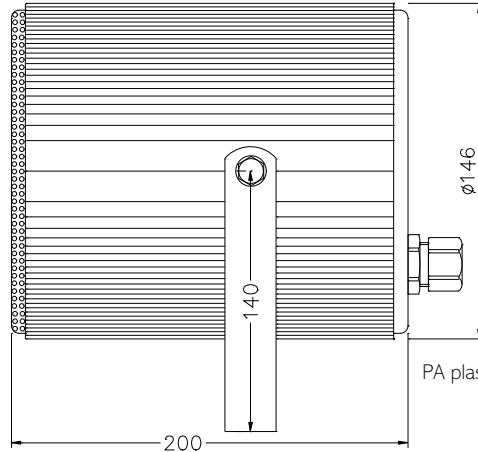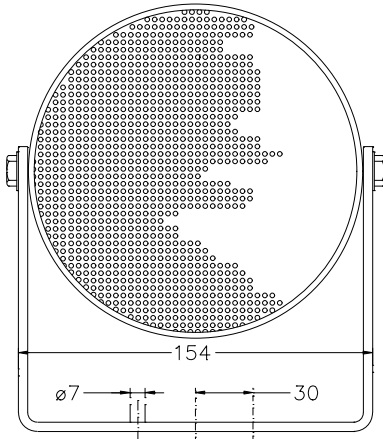

M20
Cable gland
5 – 12 mm

PA plastic lid

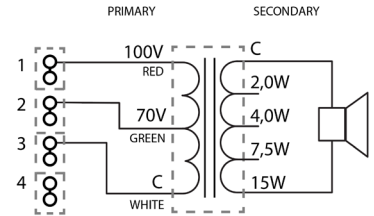

70/100 Volt combined
transformer
Primary connections


White : Green 70 V
White : Red 100 V

Secondary
nominal tapings

C : 15W	15,0W
C : 7,5W	7,5W
C : 4,0W	4,0W
C : 2,0W	2,0W

Sound pressure levels at 1W/1m

SPL vs Freq

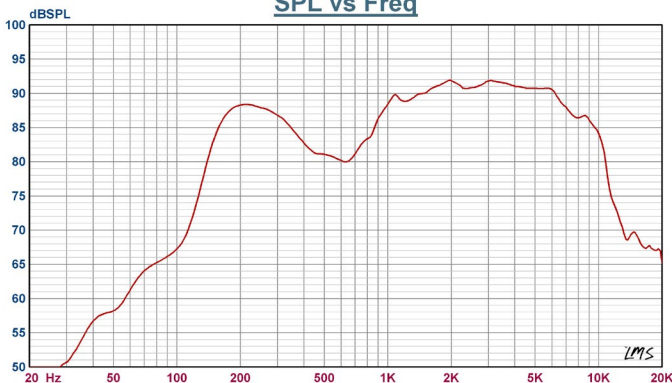

Specifications

Material / Color	(Aluminum/PA)/RAL9010 or anodized
Mounting	Bracket
Termination	Screw terminal
Weight w/transformer	2,4 kg
IP-rating	55
Max. / min. amb. temp	90°C / -40°C
Rated power	15W
SPL 1W/1m	85 dB
SPL rated power	96 dB
Effective freq. range	125 – 12000 Hz
Dispersion (-6dB) 1kHz	115° / 80°
Options	Impedances, colors, labels

Installation, Operation and Maintenance Procedures

- Fasten bracket with three screws.
- Remove lid by four screws, lead cable through the cable gland and connect to terminal 70V (white – green) or 100V (white – red).
- Choose required power on the transformer.
- Screw lid back into place by four screws with a torque of 1,5 Nm to assure the IP rating.
- CAP-15WCR(T) is designed for clean room applications.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.

DNH reserves the right to alter specifications without notice.

