




DSP-15L(T)


GERMANY DNH GmbH


Phone... + 49 040 6569 30-0 Fax..... + 49 040 6569 30-30 E-mail.....dnh@dnh.de

DNH Speakers Inc


Phone.....+ 1 484 494 5790 Fax.....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

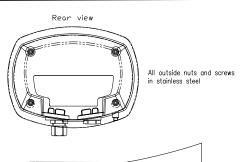


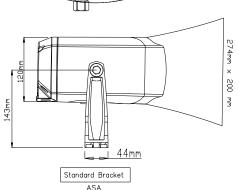

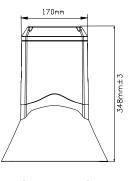


DNH WW Ltd

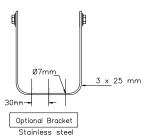

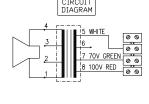

Secondary		
nomina	ll tappings	
1:4	25,0 W	
1:3	14,5 W	
2:4	9,5 W	
1:2	8,0 W	
3:4	4,0 W	
2:3	2,4 W	



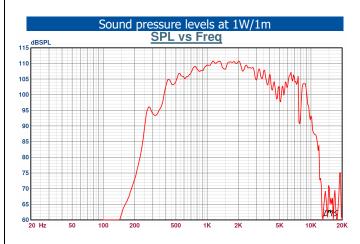

Specifications	
Material / Color	ASA / RAL 7035
Mounting	Bracket
Termination	Screw terminal
Weight w/transformer	1,9 kg
IP-rating	67
Max. / min. amb. temp	90°C / -50°C
Rated power	25W
SPL 1W/1m	110 dB
SPL rated power	122 dB
Effective freq. range	290 –11000 Hz
Dispersion (-6dB) 1kHz / 4kHz	81° / 37°
Directivity factor, Q	4,5 / 9,6
Options	Impedances, colors, labels

Installation, Operation and Maintenance Procedures

- Remove lid by four screws, lead cable through the cable gland and connect to terminal 70V (white green) or 100V (white - red).
- Choose required power on the transformer.
- Check that the gasket is fitted correctly on to the lid. Do not use any lubricants on the gasket.
- Screw lid back into place by four screws with a torque of 1,8 Nm to assure the IP rating.
- To change the position of the loudspeaker, please adjust the standard U- bracket (by loosening / tightening the screws) as required.
- DSP-15L(T) can be supplied with 3 different bracket systems, according to customer requirements.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.
- Available with an aluminum swivel bracket.