





HP-10T-MED


ENGLAND DNH WW Ltd GERMANY DNH GmbH

USA DNH Speakers Inc

Phone.....+ 1 484 494 5790 Fax....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

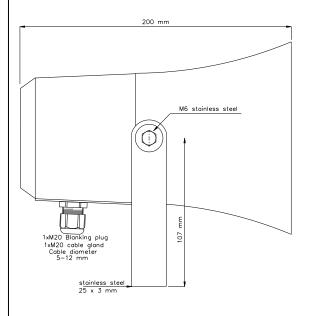


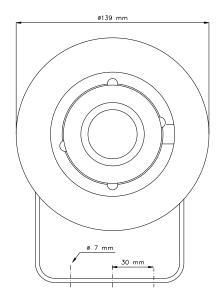



Secondary		
nominal tappings		
C:	1	10 W
C:	2	5 W
C:	3	2,5 W
C:	4	1 W

All outside nuts and screws in stainless steel

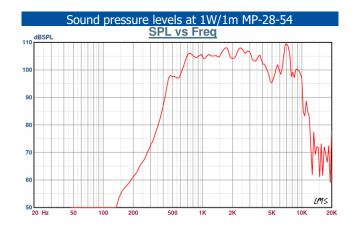

Specifications			
Material / Color	Ronfalin C110 (PC+ABS) / RAL 7035		
Mounting	Bracket		
Termination	Screw terminal		
Weight w/transformer	1,1 kg		
IP-rating	66/67		
Max. / min. amb. temp	90°C / -50°C		
Rated power	10 W		
SPL 1W/1m	107 dB		
SPL rated power	117 dB		
Effective freq. range	370 – 12000 Hz		
Dispersion (-6dB) 1kHz / 4kHz	155° / 52°		
Safe Compass distance	5 m		
Options	Colors, labels		

Installation, Operation and Maintenance Procedures

- Unscrew lid, lead cable through cable gland, connect to terminal (70V or 100V) and select required tapping onto the transformer by moving the red wire.
- Fasten lid with a torque of 1,5 Nm.
- Fasten bracket to wall or ceiling with 1 to 3 screws. Available with stainless steel bracket
- To change the position of the loudspeaker, please adjust the bracket (by loosening / tightening the screws) as required.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do <u>not</u> open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective materials and workmanship.