



BP-361ST-MED


<u>IGLAND</u>		
NH WW	Ltd	


Phone......+ 44 1908 275 000 Fax.....+ 44 1908 275 100 E-mail.....dnh@dnh.co.uk


GERMANY DNH GmbH

USA DNH Speakers Inc

Phone.....+ 1 484 494 5790 Fax....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

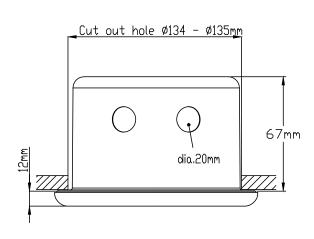

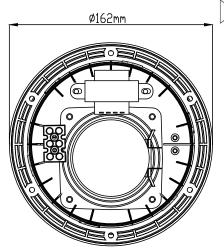

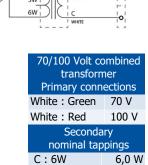

3,0 W

1,5 W

0,5 W

C: 3W

C: 1,5

C: 0,5

Sound pressure levels at 1W/1m SPL vs Freq		
95		
90		
85		
80		
75		
70	 	
65	LMS	

	100	
Specifications		
Material / Color	Steel, aluminum, ABS / RAL9010	
Mounting	Screws	
Termination	Screw terminal	
Weight w/transformer	0,52 kg	
IP-rating	20	
Max. / min. amb. temp	90°C / -20°C	
Rated / max. power	6 W	
SPL 1W/1m	90 dB	
SPL rated power	97 dB	
Effective freq. range	150 - 20000 Hz	
Safe compass distance	5 m	

Installation, Operation and Maintenance Procedures

- Lead cable through cable gland. Connect cable to terminal and select required tapping in to the transformer.
- If 70V, replace red cable with the green cable in the terminal.
- Install loudspeaker to wall/ceiling by four to six screws. Push loudspeaker grille gently into fixed position.
- For optimum performance, always use the correct voltage, power and operate within the frequency limits as stated
- Do <u>not</u> open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.