



# **VES-561T-MED**


### ENGLAND DNH WW Ltd


Phone.....+ 44 1908 275 000 Fax.....+ 44 1908 275 100 E-mail.....dnh@dnh.co.uk


#### <u>GERMANY</u> **DNH GmbH**


## USA DNH Speakers Inc

Phone.....+ 1 484 494 5790 Fax....+ 1 484 494 5793 E-mail..dnh@dnhspeakers.com

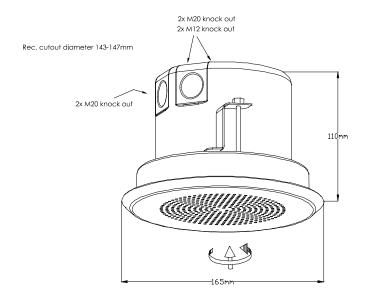



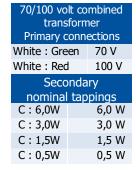

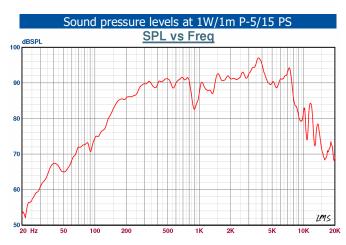

Specifications	
Material / Color	Steel / White
Mounting	3 screws
Termination	Ceramic terminal
Weight	1,1 kg
IP-rating	32C
Max. / min. amb. temp	90°C / -20°C
Standard version	100 V transformer
Rated power	6 W
SPL 1W/1m	90 dB
SPL rated power	97 dB
Effective freq. range	100 – 13000 Hz
Dispersion (-6dB) 1kHz / 4kHz	160° / 60° (baffle)
Safe Compass distance	5 m
Options	colors

### **Installation, Operation and Maintenance Procedures**

- Install the steel box into the cutout hole turning the screws connected to the three hooks, screw clockwise until the ring is fixed to the ceiling.
- Lead cable through cable gland, connect to terminal and select required tapping into the transformer.
- If 70V, replace red cable with the green cable in the terminal.
- Turn the grille gently clockwise within the ring until it stops.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Transformer according to British standard 5839.
- Do <u>not</u> open loudspeaker when energized.
- This loudspeaker is supplied with two years warranty against defective workmanship.